

## JP 2 : BROM ADDRESS

1	2	3	4	5	BROM BASE SIZE
0	0	0	0	0	DISABLE NONE
0	1	0	0	0	C0000H,32K
0	1	0	0	1	C8000H,32K
0	1	0	1	0	D0000H,32K
0	1	0	1	1	D8000H,32K
0	1	1	0	0	C0000H,64K
0	1	1	0	1	D0000H,64K
1	0	0	0	0	C0000H,16K
1	0	0	0	1	C4000H,16K
1	0	0	1	0	C8000H,16K
1	0	0	1	1	CC000H,16K
1	0	1	0	0	D0000H,16K
1	0	1	0	1	D4000H,16K
1	0	1	1	0	D8000H,16K
1	0	1	1	1	DC000H,16K

## JP3: AUI Connector

This connector is used to attach a cable to another bracket for AUI connection.

### Installation:

1. Hook up the cable to the connector pins marked "AUI". Make sure the red line on the cable is positioned in the "pin 1" location.
2. Secure the bracket to the PC.